


HEATSTRIP[®]



USER MANUAL

HEATSTRIP[®] Universal Stand THSTAND

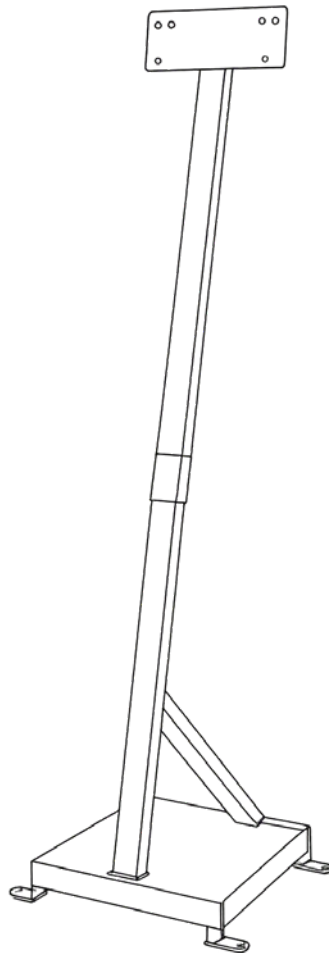


Superior Technology. Superior Style.

**Be Sure to Carefully Consult the User
Manual Before You Begin Using the Unit**


heatstrip.com.au




Hardware For THSTAND

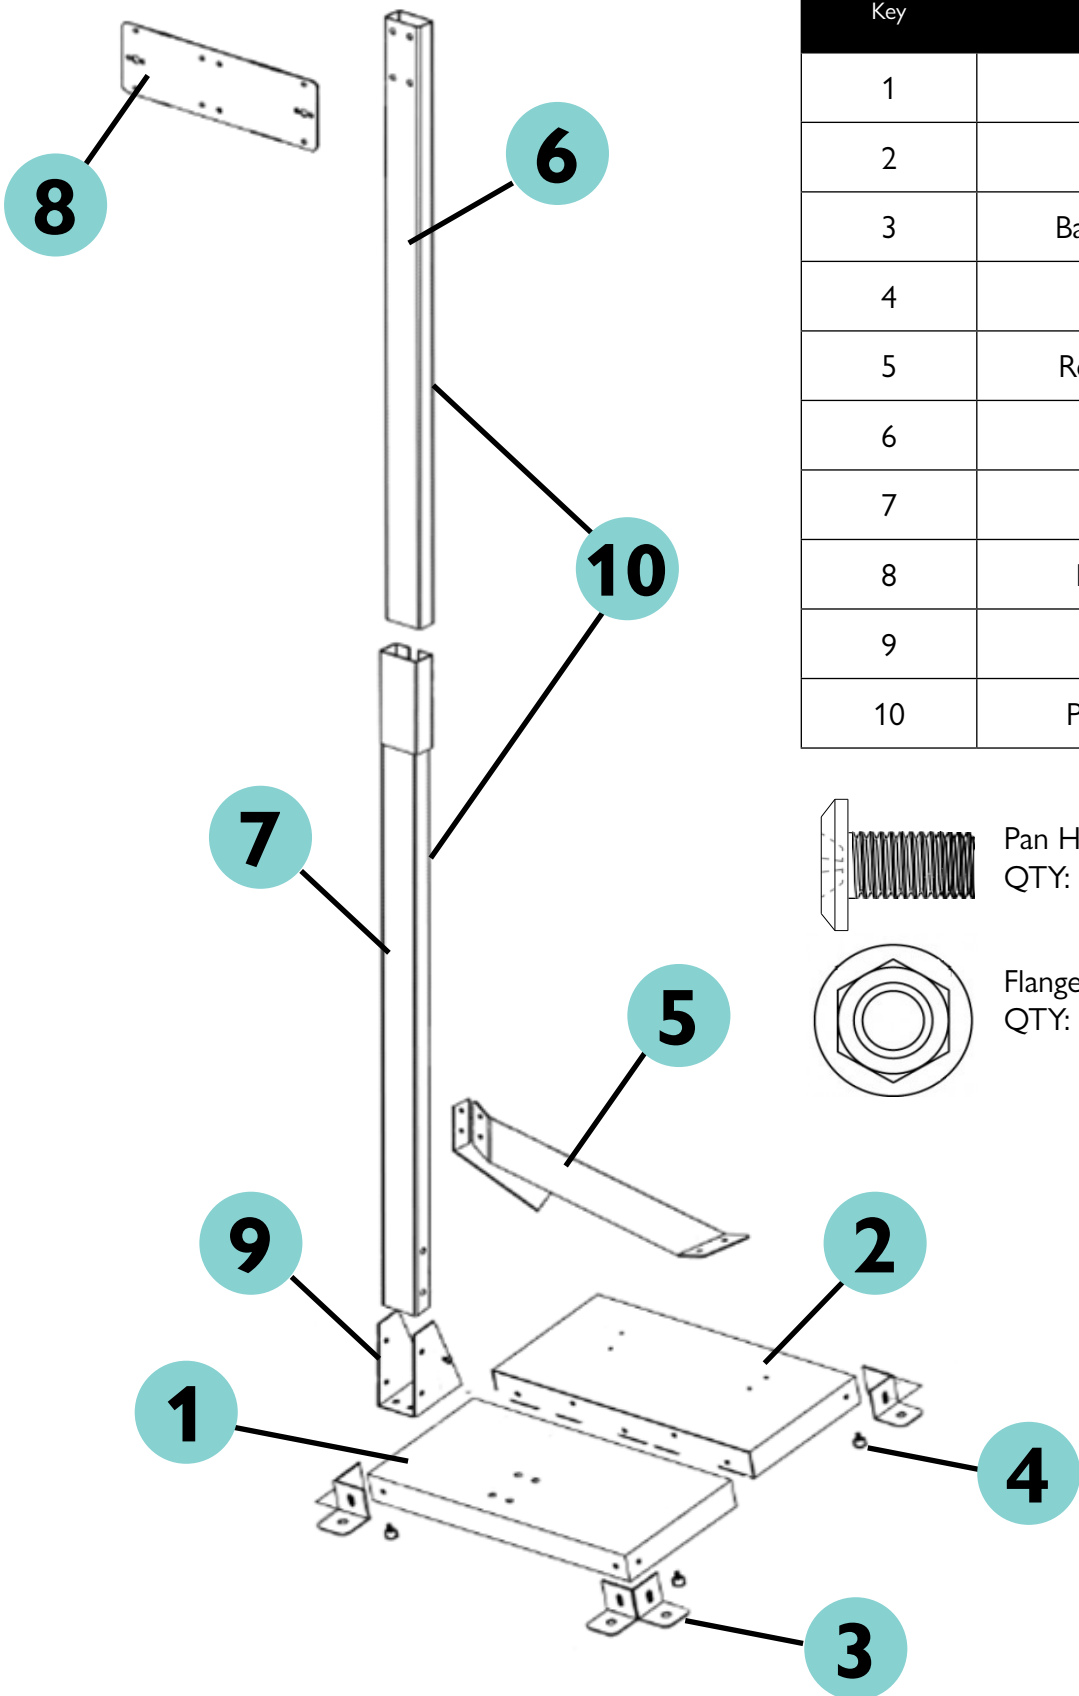

Key	Description
1	Base A (Front)
2	Base B (Back)
3	Base Brackets (x4)
4	Base Feet (x4)
5	Rear Post Bracket
6	Post—Upper
7	Post—Lower
8	Heater Bracket
9	Base Bracket
10	Power cord clips

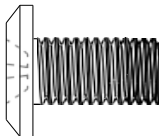

Pan Head Screw M6x10mm
QTY: 41

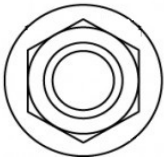


Flange Nut M6
QTY: 5

Assembly Instructions

CAUTION: To assemble this heater, you should obtain assistance from another person when handling the larger, heavier pieces.

1 Joining Base

 
- Remove all the packing material and place on a non-abrasive surface.
- Position the Base as shown in the diagram.
- Once the slotted holes are aligned, use 5 Pan Head screws then tighten securely with the nuts provided.



Pan Head Screw M6x 10mm
QTY: 5




Flange Nut M6
QTY: 5

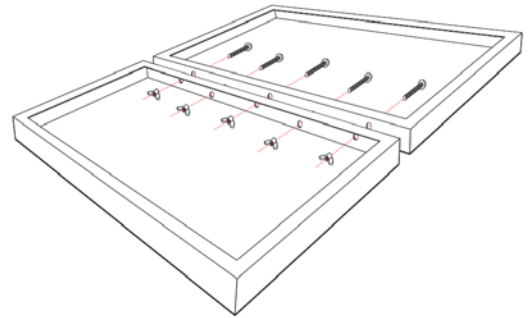


2 Install Base Brackets & Fixtures

 - Before flipping the Base, attach the 4 base feet (4) to each corner.
- Once the feet are attached flip the base over. Add the 4 stabiliser brackets (9) to each corner. Line up the holes and attach two screws through each bracket (8 Screws in total)




Pan Head Screw M6x 10mm
QTY: 8

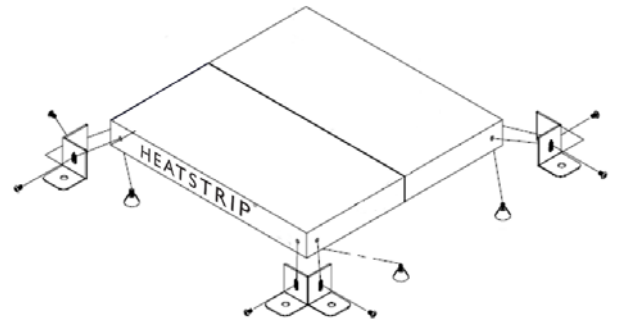


3 Install Lower Post Brackets

 - Line the holes up and attach post bracket (9) to the front base using 4 screws (2 at the front & 2 at the back) Ensure the holes on the bracket are facing outwards.
- Once you have fixed the bracket to the Base, Attach the Lower post (7) to the post bracket. Once you have the holes lined up, attach 4 screws (2 on either side) through the bracket and into the post.



Pan Head Screw M6x 10mm
QTY: 8

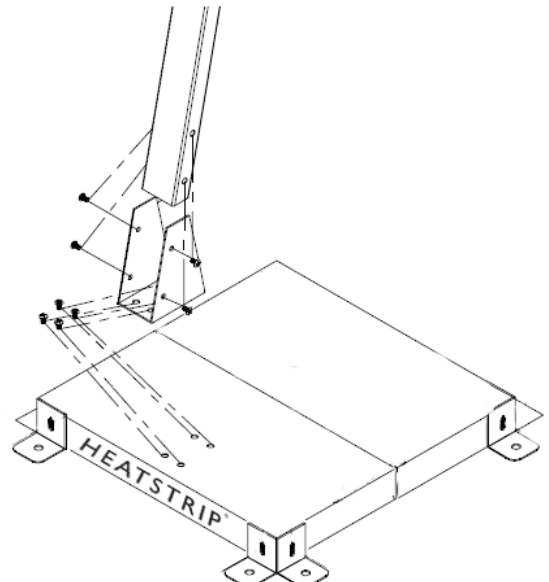


Assembly Instructions

CAUTION: To assemble this heater, you should obtain assistance from another person when handling the larger, heavier pieces.


4 Install Side Panels

- Place two Side panels (5) onto the Base.
- Install the Left Side Panel to the Lower Post using 2 Screws. Then place the Left back bracket to the Base matching the holes. Once the holes are matching, use 2 Screws to secure*.
- Repeat the same steps for the Right Side Panel, then tighten all the screws securely.

 * There is a top & bottom for these brackets, so if they do not initially match the holes, swap the bracket around.




Pan Head Screw M6x 10mm
QTY: 8

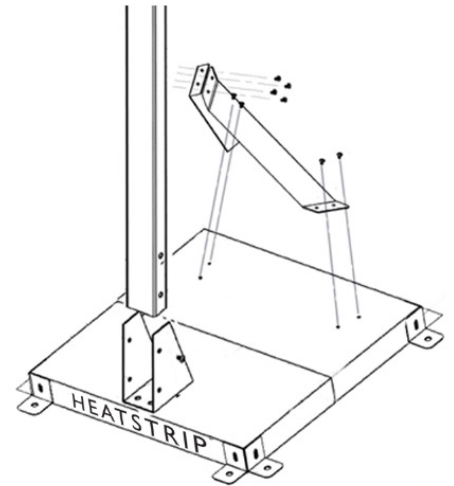


5 Install Heater Bracket

 - Place the bracket (8) on the top post.
- Using the Bracket Head, match the holes to the top post (6). Once the holes are matched, use 4 screws then tighten securely as shown in the diagram.
- Ensure bracket is attached in the correct direction, as per the diagram.




Pan Head Screw M6x 10mm
QTY: 4

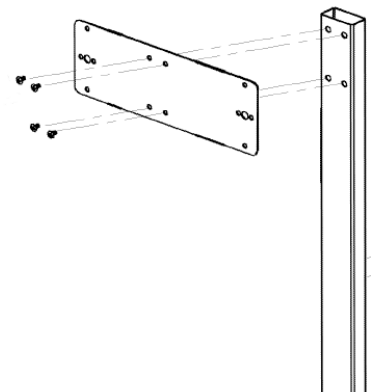


6 Install Top Post

 - Insert and slide the top post into the lower post bracket and connect using them using 4 screws at the back of the post. Then tighten all screws securely.



Pan Head Screw M6x 10mm
QTY: 4

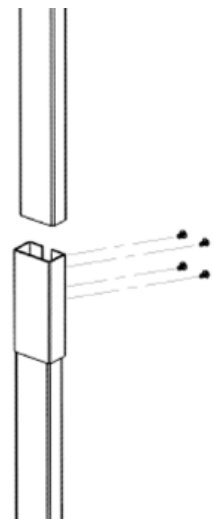


Assembly Instructions

CAUTION: To assemble this heater, you should obtain assistance from another person when handling the larger, heavier pieces.

7 Attach the Heater to the Stand

 - Using the 2 brackets, attach the brackets to the heater.
- Match the brackets to the holes located on the bracket head shown in the diagram.
- Using the bolts included with the heater, tighten the heater brackets to the bracket head support securely.
- Ensure the heater is centred on the post.



Pan Head Screw M6x 10mm
QTY: 2-4



As this stand uses a universal bracket, any of our electric heaters 10amp and under can be installed onto the bracket. Make sure to angle the heater downwards on a 45° angle.

8 Attach the Power Cord Clips

- Using small screws attach the 3 power cord clips using 2 screws per clip to the back of the post.
- Line the clip up with the hole and screw in to secure.



Hex Nut M12
QTY: 2

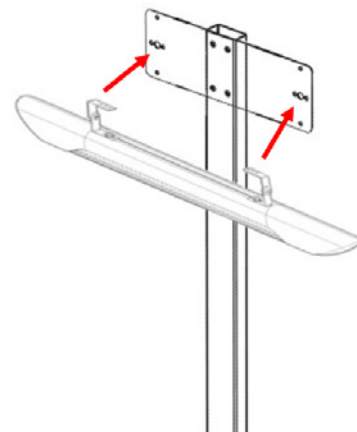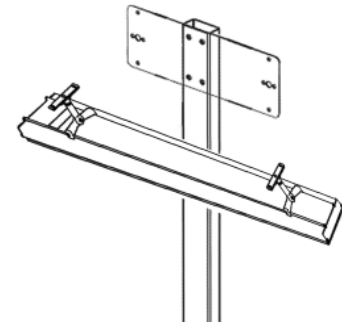

Clips and
Screws
attached to
the top and
bottom post

Warranty Terms & Conditions

The below Warranty Terms and Conditions apply for **New Zealand and Australia only**. For international warranty please refer to international warranty terms and conditions.

Glen Dimplex warrants to the original owner that HEATSTRIP® Universal Stand (THSTAND) products will be free from defects in materials and workmanship for a period of 36 months for residential applications and 24 months for commercial applications, from the date of purchase in accordance with the following warranty terms and conditions.

Provision of this warranty is subject to:

- The HEATSTRIP® product must be installed in accordance with the Installation Instructions and relevant electrical standards and codes.
- The HEATSTRIP® product must be maintained and cleaned according to instructions detailed in the Installation Manual.
- There is no warranty expressed or implied with regard to capacity requirements. The selection of the unit or units depends entirely upon the system design and capacities as determined by the purchaser.
- The customer has not repaired, opened or altered the product in any unauthorised manner.
- This warranty excludes damage to the product or components arising from circumstances outside the control of Glen Dimplex, including, but not limited to, where the product is not used for intended purpose; where the product has been rectified in any way; incorrect installation; incorrect power supply; damaged caused during delivery; misapplication, misuse, abuse, vandalism, lack of maintenance or accident.
- Glen Dimplex's obligations under this warranty are limited to repair or replacement at Glen Dimplex's factory of any components of the product which Glen Dimplex identifies to its satisfaction to be defective.
- Transportation charges involved in return of the product to the Glen Dimplex factory (or any other location authorised in writing by Glen Dimplex) is the sole responsibility of the customer.
- All products are inspected and tested before despatch and are at the risk of the purchaser after the shipment from the Glen Dimplex factory, if not delivered by Glen Dimplex to destination.
- Discolouration of the surface may occur after a period of time, this does not constitute a warrantable event.
- Twisting and bending of the heaters may occur, this does not constitute a warrantable event.
- No products or components will be supplied in advance of an examination of the faulty product or components by Glen Dimplex or an authorized representative of Glen Dimplex.
- Glen Dimplex does not participate in any site related costs or labour expenses incidental to replacement of parts, repairing, removing, installing, servicing, transportation or handling of parts to complete products, and assumes no liability on parts repaired or replaced without written authorisation. Glen Dimplex shall not be liable for any default or delay in performance of its warranty obligations caused by any circumstances beyond its control, including, but not limited to, judicial or government restrictions, strikes, fires, floods, abnormal weather conditions, delayed supply of components.

Should products be determined as damaged on arrival, immediately notify the transport company of the condition and have them noted on the freight documents. If damage is discovered after unpacking, demand immediate inspection by the transportation company and insist that a record of the damage is made on the freight documentation.

The customer warrants using the product in accordance with:

- Any instructions provided to it by Glen Dimplex from time to time.
- All government and local regulations, including but not limited to all relevant electrical, environmental laws and regulations governing the installation, storage, use, handling and maintenance of the goods.
- All necessary and appropriate precautions and safety measures relating to the installation, storage, use, handling and maintenance of goods.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

All warranty requests for repairs or replacements must be accompanied by a complete "Warranty Claim Form" available from Glen Dimplex, together with proof of purchase (and where possible, photos of the installation) and the heater returned to the place of purchase.

In the event of a warranty claim, the goods need to be returned to the distributor/retailer for repair/replacement. Contact

Glen Dimplex Australia Pty Ltd
8 Lakeview Dr Scoresby, Victoria 3179, Australia
Telephone: 1300 556 816 (AU) & 09 274 8265 (NZ)
Email: HyperCare.Support@glendimplex.com.au

